

S Onyyx GUIDE

The Onyyx system is a wireless, 20 device security system that allows you to control the entire system using the Onyyx app. A full range of Xwave^{2LITE} indoor and outdoor detectors are designed to meet your needs in a multitude of scenarios. Onyyx is extremely easy to install and set up, and can be linked to your armed response company. **Onyyx devices**



Onyyx wireless Hub 860-1-646



MotionSense 860-05-674

DoorSense 860-22-690




Onyyx Remote 860-06-646



1. Remove the wall mount bracket from the bottom of the Onyyx hub.

or more.

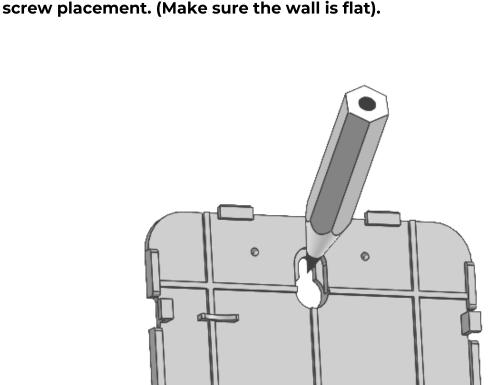


2. Place the wall mount bracket on the wall and mark the position of the keyhole

remove the bracket.

3. Drill the marked spot with a 5mm drill bit, place the wall plug into the hole and

screw in a M4 screw from the accessory kit, leaving a gap of approximately 8mm

4. Hook the wall mount bracket onto the screw you have just inserted and hold the bracket against the wall, making sure the top is level. Mark the other 2 holes and

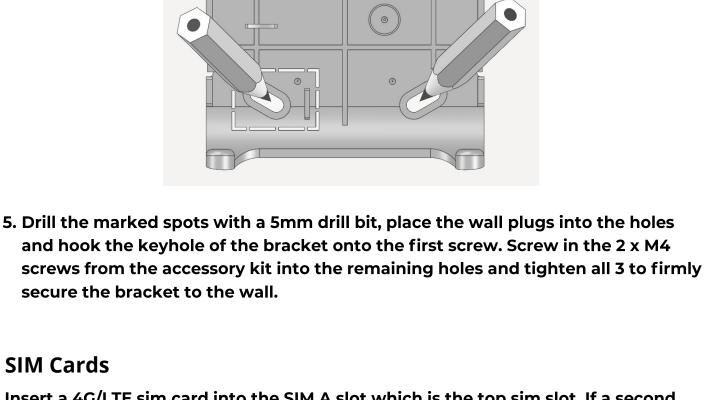



Insert a 4G/LTE sim card into the SIM A slot which is the top sim slot. If a second failover SIM is required, insert the second SIM card into the bottom slot which is SIM B.

Battery

SIM Cards

OP - SIM A

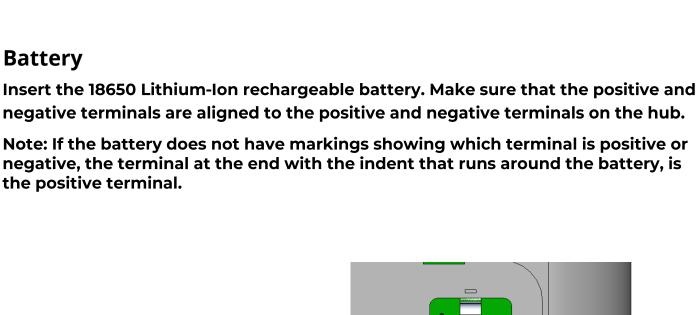

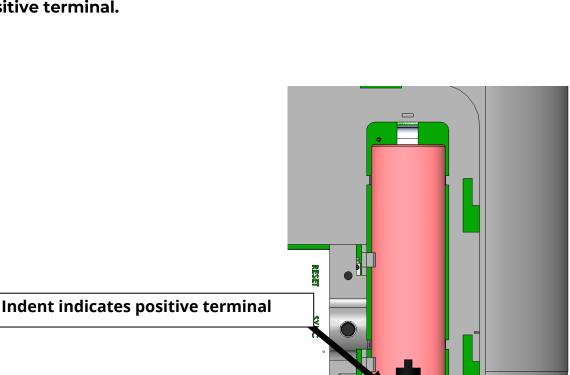



LED Icons

Power

shown below.

approved battery.

Plug the power supply into the electrical mains supply and switch on. 1. The buzzer will give a short beep. 2. The orange power LED (will illuminate. 3. Wait until the blue network LED (🏟) is illuminated.

Insert the 5V 2A DC power connector and loop the cable through the wire guide as

Do not place the battery in or near fire, on stoves or high temperatures

regulations. The device was tested for safety using the 18650 Lithium-Ion rechargeable battery. It is recommended to only use the manufacturer's

above 45°C. Always dispose of the cells according to local safety

Lock Icon: - Off - One or more areas are not ready to be armed - Green On – All areas are ready - Red On - One or more areas are armed - Red Fast flash - One or more areas are in alarm - Red Blink - One or more areas in Exit delay Network icon: (ඉ) - Off - not connected to platform - On - connected to platform - Blink - communicating with platform Power Icon: - Blink - AC fail Fast flash – Hub battery low/missing - 1 slow flash - hub tamper

1. Download the Onyyx app from your mobile phones app store.

4. Click Add Site 5. Scan the Onyyx hub's bar code. 6. Follow the prompts to create the site.

Setup

Scan Code on Hub

- 2 slow flashes – device tamper

2. Create a Onyyx account.

3. Log in to the Onyyx app.

- 3 slow flashes – device low battery

Or ENTER THE CODE MANUALLY to



123456

All devices are added via the app by scanning the QR code. Scan the QR code and follow the prompts. If you require further help the app has a comprehensive help menu.

